



DESIGN + ENGINEERING  
GROHE GERMANY


99.1584.131/ÄM 252915/05.22

 

www.grohe.com

Pure Freude  
an Wasser

GROHE

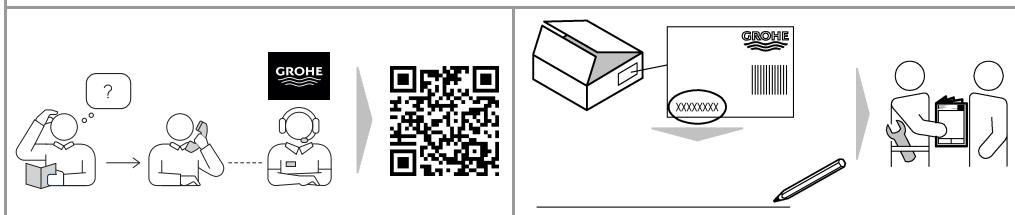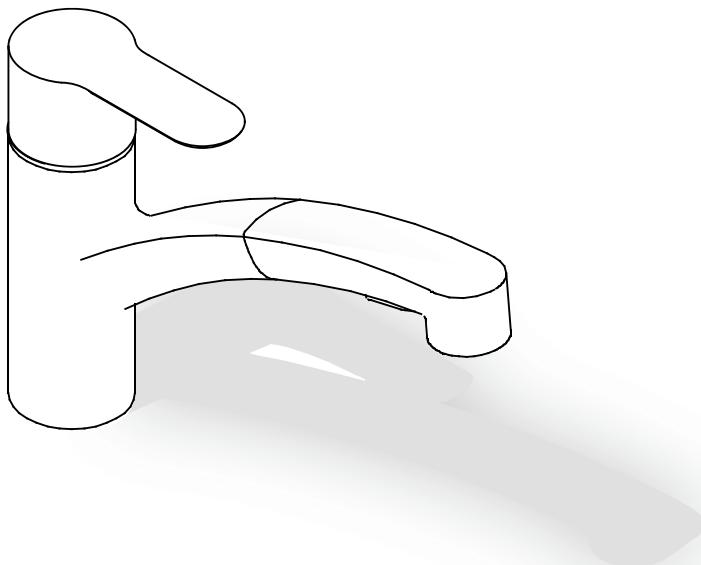


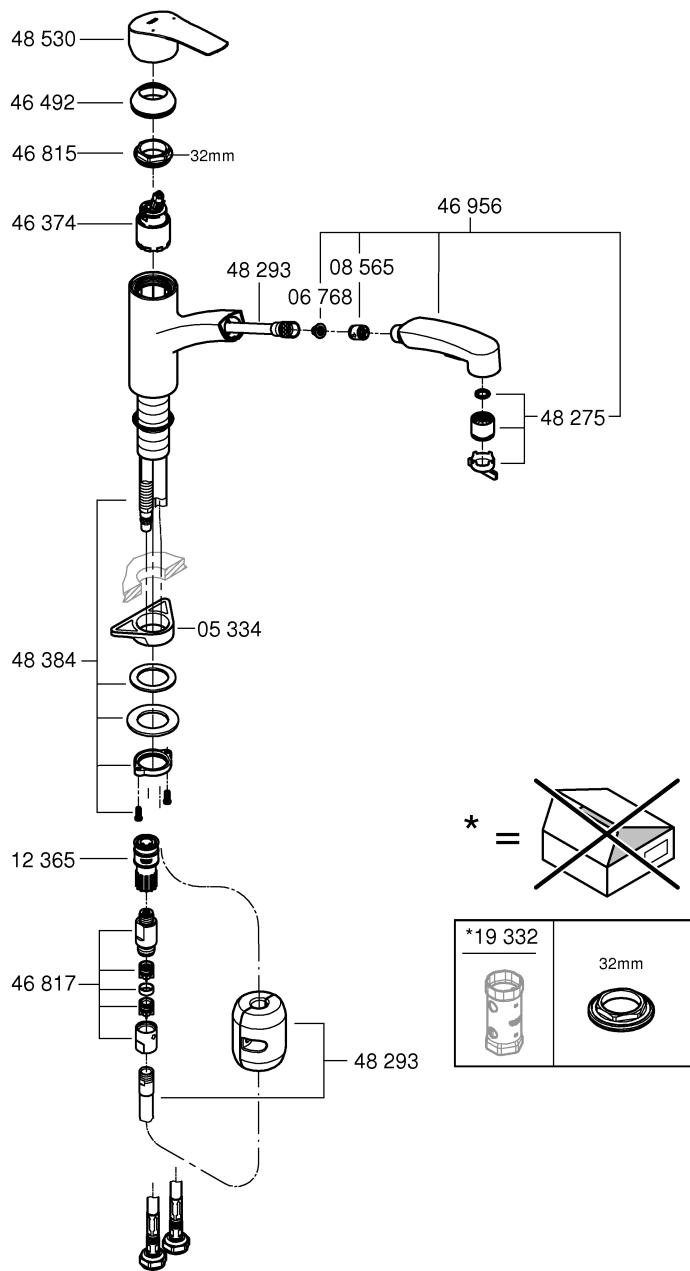


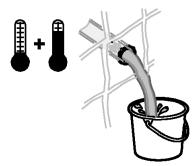



32mm  
\*19 332




1

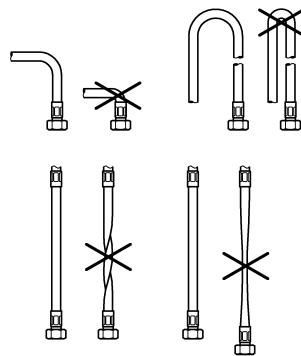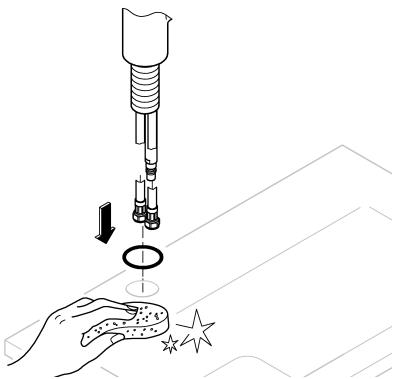

2

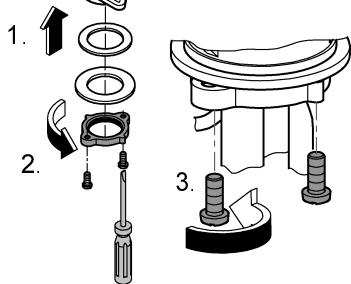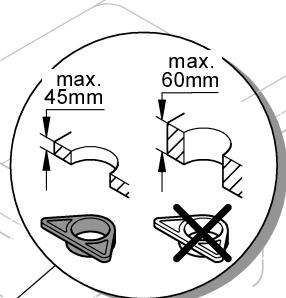


3

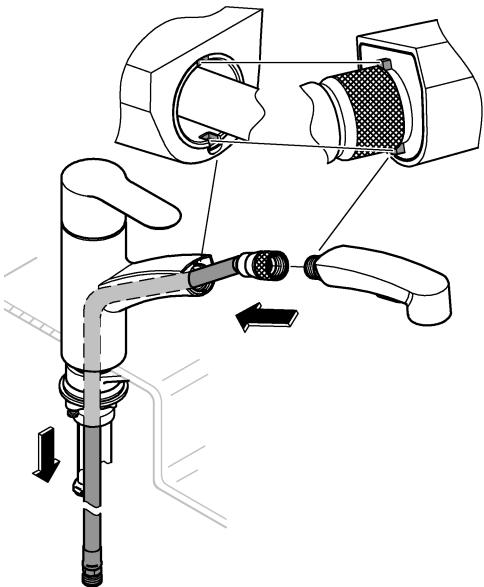





4

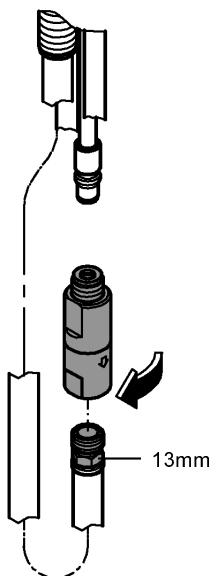


5

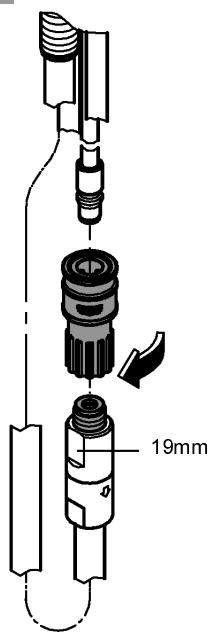


6




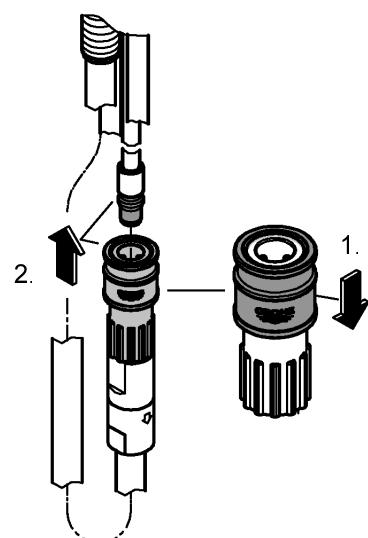




7


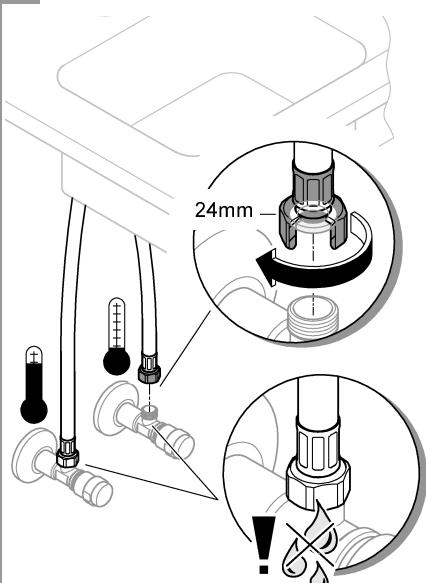


8

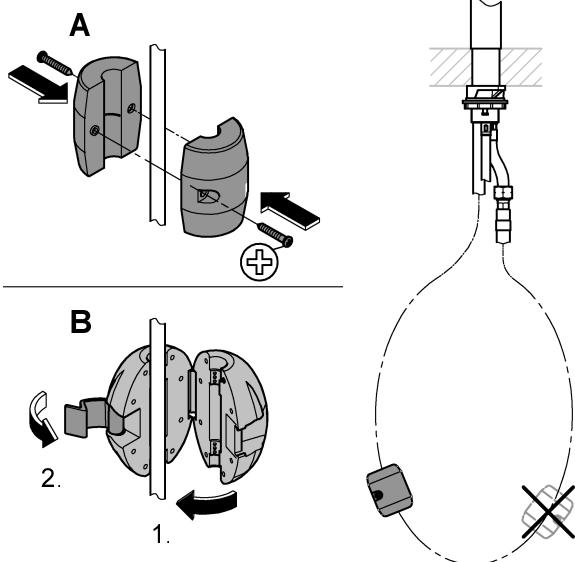

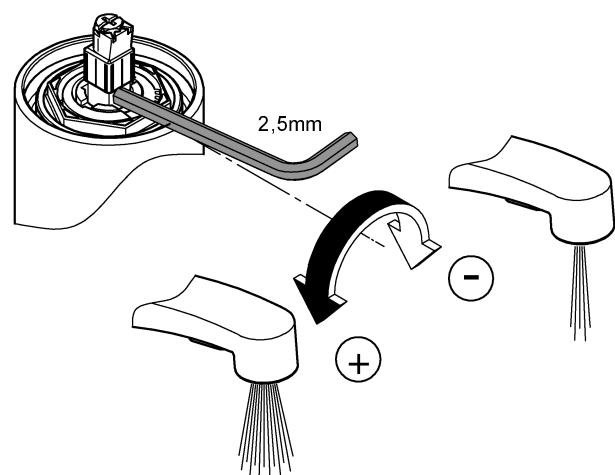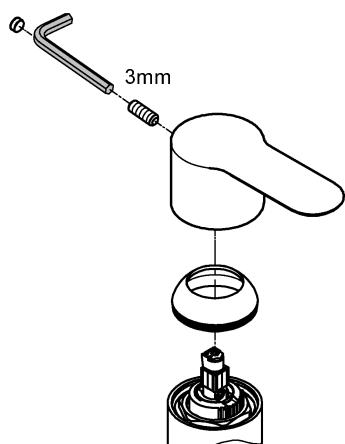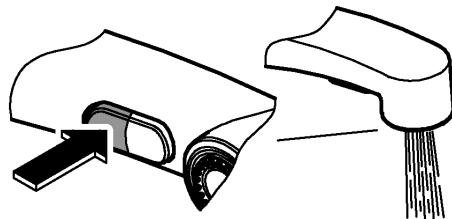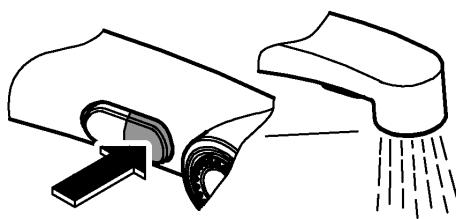

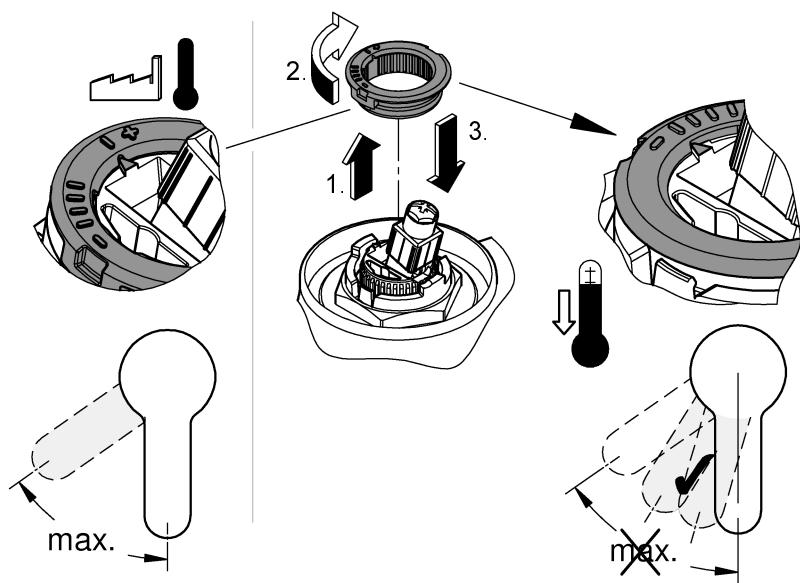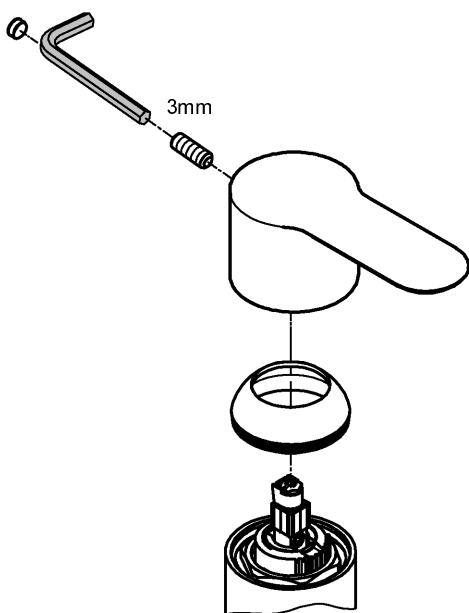

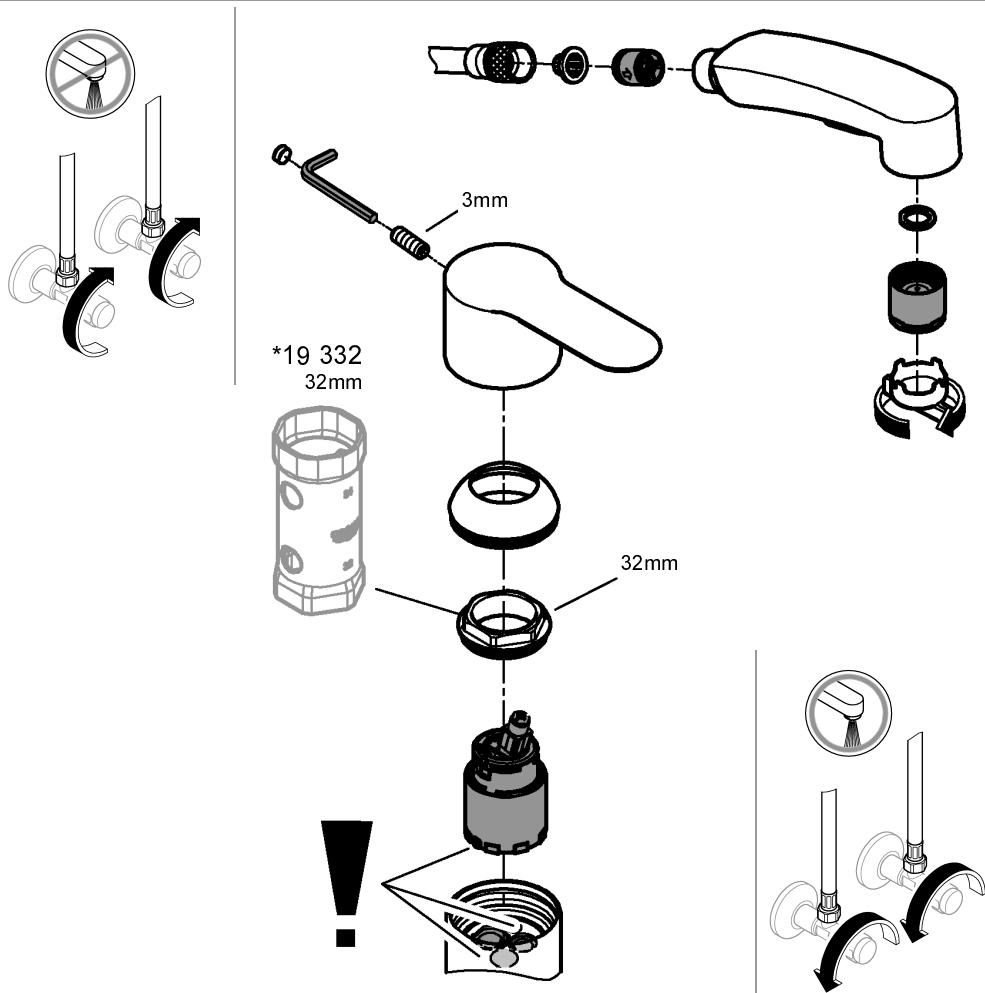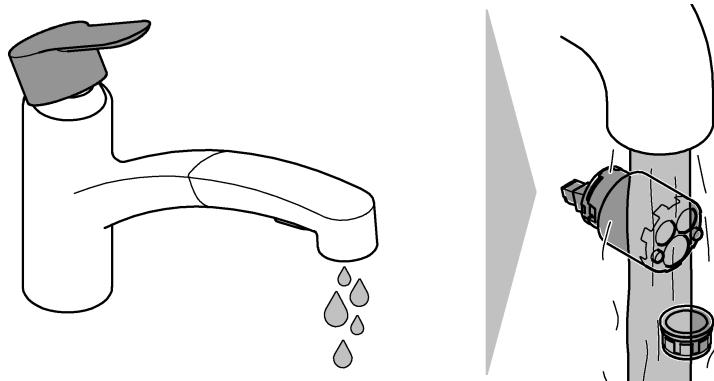

## **Application**

- for kitchen

Can be used in conjunction with:

- Pressurised storage heaters
- Thermally controlled instantaneous heaters
- Hydraulically controlled instantaneous heaters

Operation with unpressurised storage heaters (open water heaters) is **not** possible.

## **Specifications:**

• Flow pressure	min. 50 kPa - recommended 100 - 500 kPa
• Operating pressure	max. 1000 kPa
• Test pressure	1600 kPa

If static pressure is greater than 500 kPa, fit pressure reducer.  
Avoid major pressure differences between hot and cold water supply.

• Flow rate at 300 kPa flow pressure	approx. 6 L/min
• Temperature	
Hot water inlet:	(maximum) 70 °C
Recommended:	(energy saving) 60 °C
Thermal disinfection possible	
• Water connection	cold - right hot - left
• Max. clamping length	max. 60mm

## **Installation**

 **Flush piping system prior and after installation of fitting thoroughly (Consider EN 806)!**

This product must be installed in conformance with local codes e.g. AS/NZS 3500 series of standard!

**Installation and connection**, see Fig. [1] - [7].

Refer to the dimensional drawing.

The cold-water supply must be connected on the right and the hot-water supply on the left.

**Note:** If the support plate is omitted, the clamping length can be increased by 15mm, see Fig. [2].

**Open cold and hot-water supply and check connections for watertightness!**



**Check fitting for correct operation.**



**Flow rate limiter.**

This mixer is fitted with a flow rate limiter, permitting an infinitely individual variable reduction in the flow rate. The highest possible flow rate is set by the factory before despatch.

**The use of flow rate limiters in combination with hydraulic instantaneous water heaters is not recommended.**



**Temperature limiter** is inoperative on delivery.



**Maintenance**

Inspect and clean all parts, replace as necessary and grease with special grease.

**Shut off cold and hot water supply!**

**Replacing the cartridge.**

Assemble in reverse order.

**Observe the correct installation position!**

Make sure that the cartridge seals engage in the grooves on the housing. Screw in and tighten screwing.



**Replacement parts** (\* = special accessories).

## **Care**

For directions on the care of this fitting, refer to the accompanying Care Instructions.