

## Zen SS316L Metal Shower Shelf

# Nero

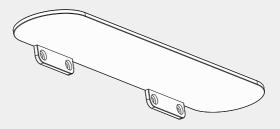

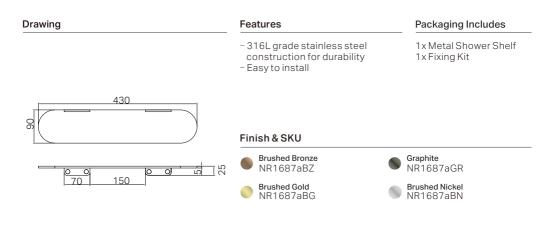

Versions:202405



\*Dimensions are nominal measurements only.


### Installation Instruction

### GENERAL INSTRUCTIONS AND WARNINGS

- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.

#### MAINTENANCE AND CARE


- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.




1. Place the metal shower shelf in the desired installation position.

Use a level to ensure the metal shower shelf is horizontal.


Mark the positions directly below the bases with a marking pen.




3. Insert the expansion plugs into the drilled holes using a hammer.



2. Use an electric drill with a 6mm drill bit to drill holes at the marked points.



4. Place the metal shower shelf and secure it firmly with expansion screws.



5. Cap the screw holes.