

Rain Square 3 Function Shower On Bracket

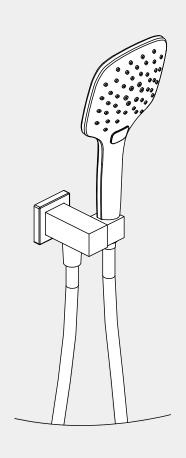



Versions:202311

Drawing

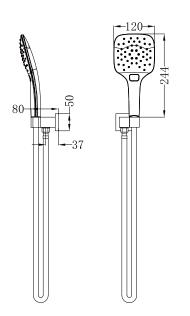

Specifications

SKU

NR306

Watermark License

WM-060093

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Finish





Matte Black NR306MB

Packaging Includes

1x Hand Shower(Built- In Check Valve) 1x 1.5m Hose 1x Bracket

^{*}Dimensions are nominal measurements only.

Nero

Installation Instruction


Important

All products must be installed by licensed plumbers.


All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.




1. Apply thread sealant or teflon tape on the outlet thread.




2. Put washer into bracket body.



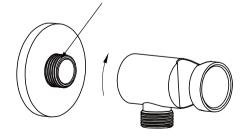

3. Pull back plate onto the outlet, and screw shower bracket body onto outlet.

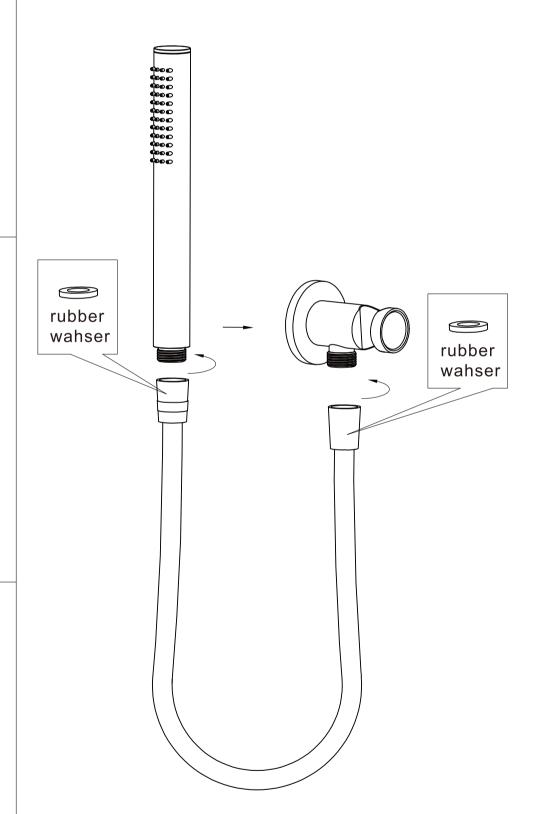

4. Connect bracket and hand shower with hose. TEST & CHECK FOR LEAKS.

www.nerotapware.com.au

Nero



