


Classic/Dolce Bathroom Accessories


ROBE HOOK

NR2082CH / NR2082MB / NR2082BN

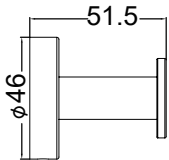


SINGLE TOWEL RAIL 600MM

NR2024CH / NR2024MB / NR2024BN




TOILET ROLL HOLDER

NR2086CH / NR2086MB / NR2086BN

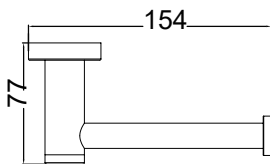


DOUBLE TOWEL RAIL 600MM

NR2024dCH / NR2024dMB / NR2024dBN




HAND TOWEL RING

NR2080CH / NR2080MB / NR2080BN

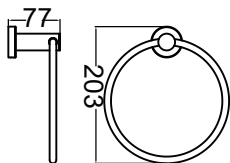


SINGLE TOWEL RAIL 800MM

NR2030CH / NR2030MB / NR2030BN



DOUBLE TOWEL RAIL 800MM

NR2030dCH / NR2030dMB / NR2030dBN



Available Colour



Chrome




Brushed Nickel



Matte Black


Installation Instruction

1

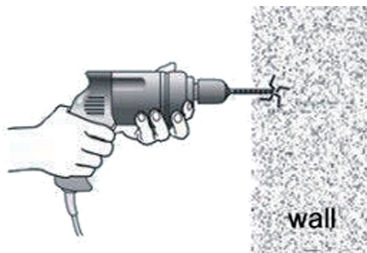

1. Put the fixing blocks (piece) over on the right place on the wall , and stay level, use marking pen through the holes of fixing block to mark out fixing spots on the wall. Then drill holes by electric hand drill with 6mm drilling bit on the spots.


02

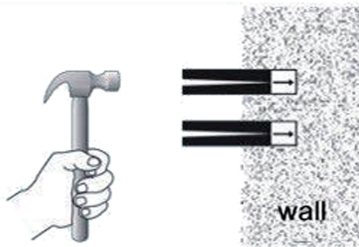

2. Put the expansion plugs into the wall by hammer.




3. Put fixing block cover on the holes and fix firmly by expansion screws.

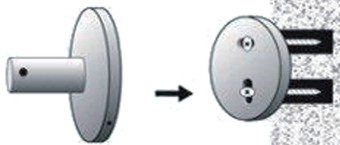

4. Put the base of bathroom accessory cover on the fixing blocks.

04

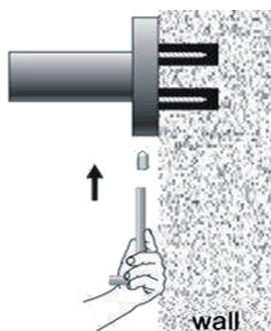

5. Screw grub screws into the base, make it against to the fixing block tight and firm.