
Raised Disabled Care Pneumatic Flush Buttons Plate DDA Compliant

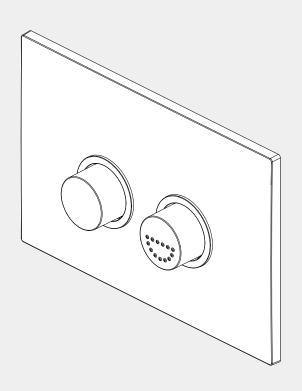





Versions:202401


Packaging Includes 1x Toilet Push Plate Finish & SKU Chrome NRCRPL002CH NRCRPL002BD Matte Black NRCRPL002BG MRCRPL002BD Pushed Bronze NRCRPL002BC NRCRPL002BC NRCRPL002BC Pushed Since NRCRPL002BC NRCRPL002BC Pushed NRCRPL002BC NRCRPL002BD Pushed NRCRPL002BC NRCRPL002BD Pushed NRCRPL002BD Pushed NRCRPL002BD Pushed NRCRPL002BD Pushed NRCRPL002BD

Raised Disabled Care Pneumatic Flush Buttons Plate DDA Compliant-Manual

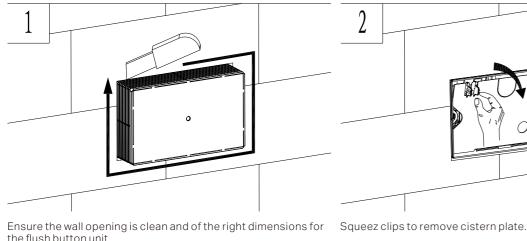


the flush button unit.

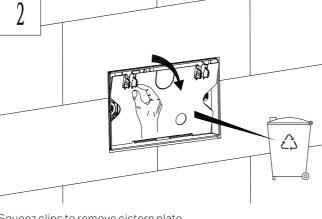


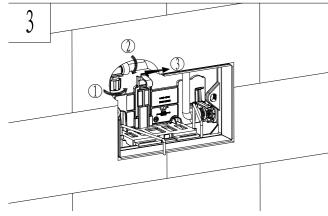


Remove hose follow by 1, 2, 3 direction.

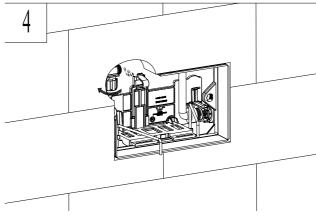


Turn on valve to flush out debris.

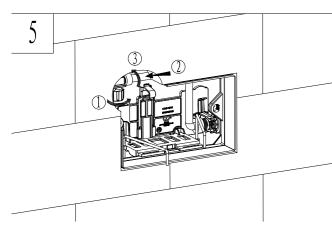


Reconnect hose follow by 1, 2, 3 direction.

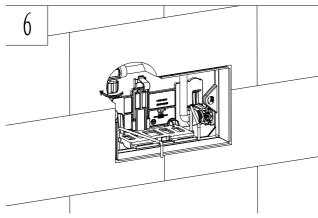


Turn valve on and check for leaks.

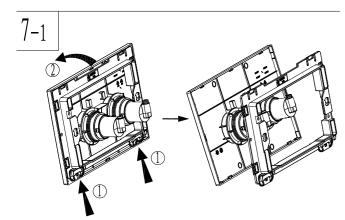


 $Connect\,the\,pneumatic\,tube\,to\,the\,actuator.$

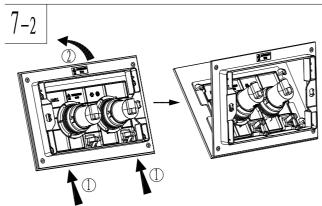


Ensure the tube and the mounting panel are secure and there are no kinks.

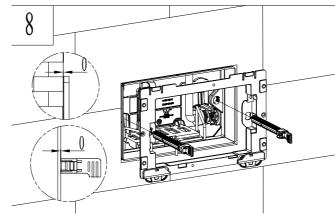


Hold mounting panel vertically and fit lock threads into the cistern plate holes.

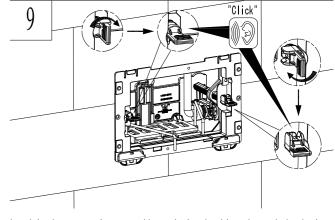


Lock in the mounting panel by twisting locking thread clockwise with a 'click' sound.

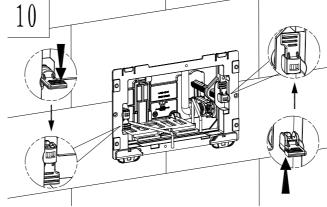


Fold the two tabs in.

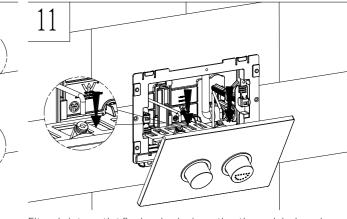

Fit rods into outlet flush valve by inserting through holes where arrows pointing at.

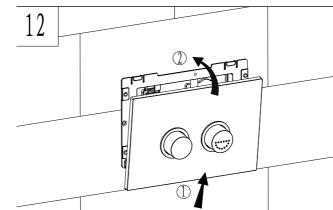

Align and attach the faceplate to the panel.

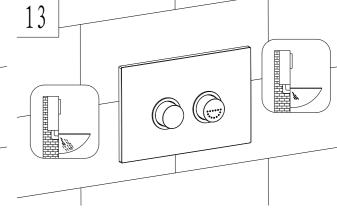

Finished.

Nero

